 


AIROH

KOMBAKT

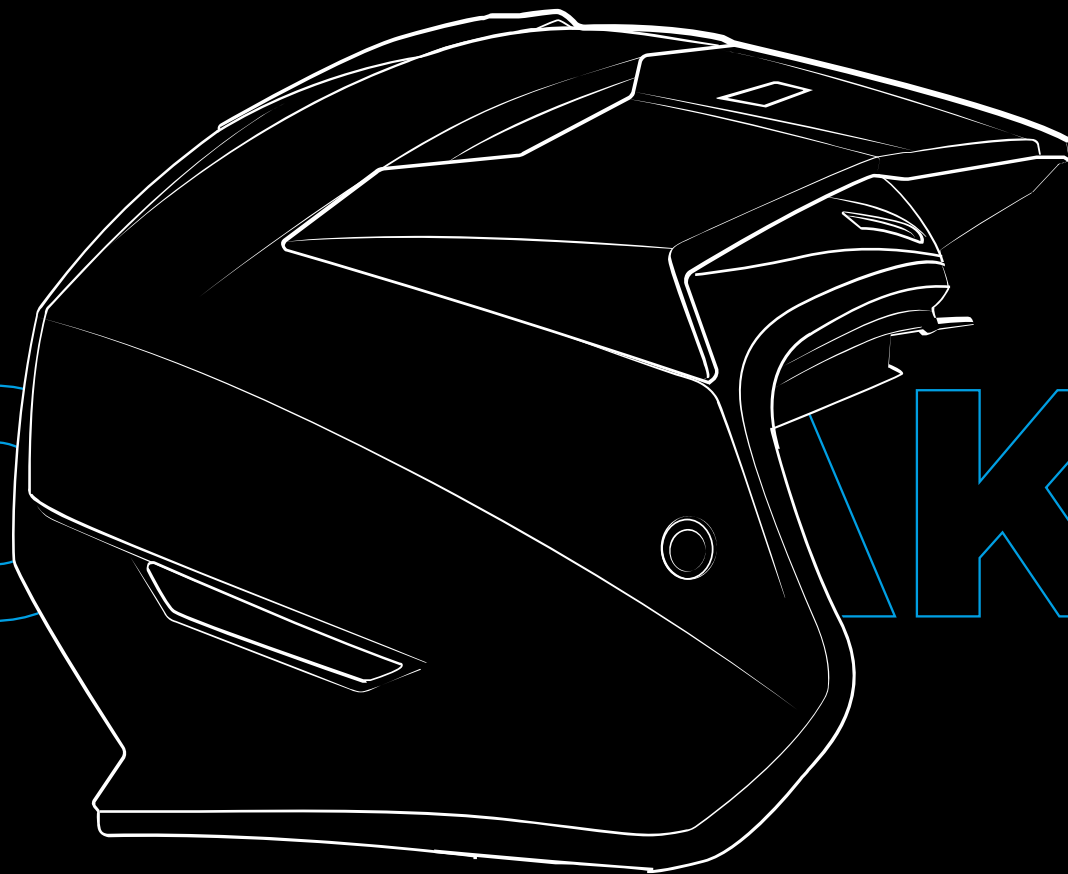

LOCATELLI S.P.A

VIA DELLA RESISTENZA,
5/A, ALMENNO
SAN BARTOLOMEO 24030
BG - ITALY

USER'S INSTRUCTIONS

KOMBAKT

 
INDEX

AIROH

- 3 Operation of the Visor**
- 4 Visor Removal and Reassembly**
- 5 Chin Strap**
- 6 Comfort Liner Removal**
- 8 Comfort Liner Installing**
- 10 Ventilation System**
- 12 Peak Removal**
- 13 Peak Installing**
- 14 NAKED Version**
- 15 Spare Parts**
- 16 Communication System**

OPERATION OF THE VISOR



AIROH

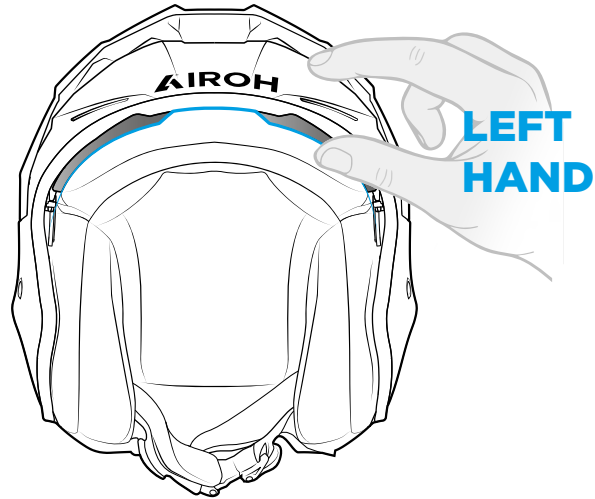

1 First Position



  
2 Second Position

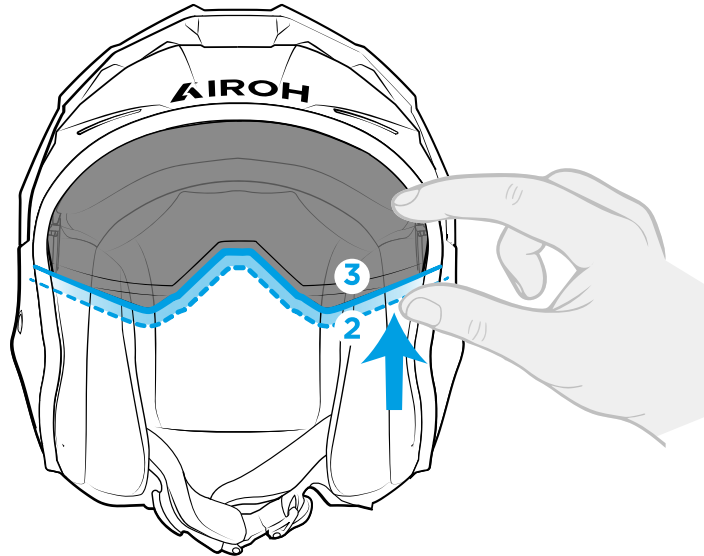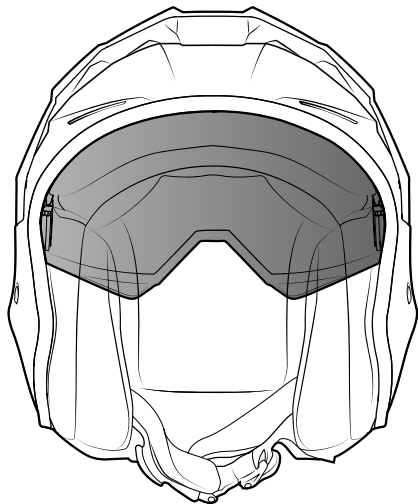



3 Third Position

VISOR REMOVAL AND REASSEMBLY

 Visor removal


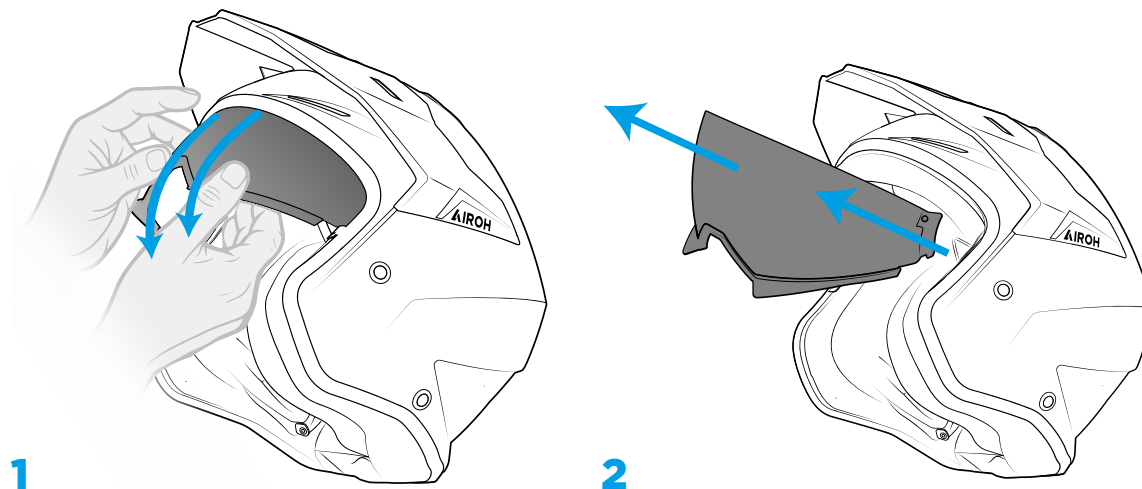


Visor reassembly

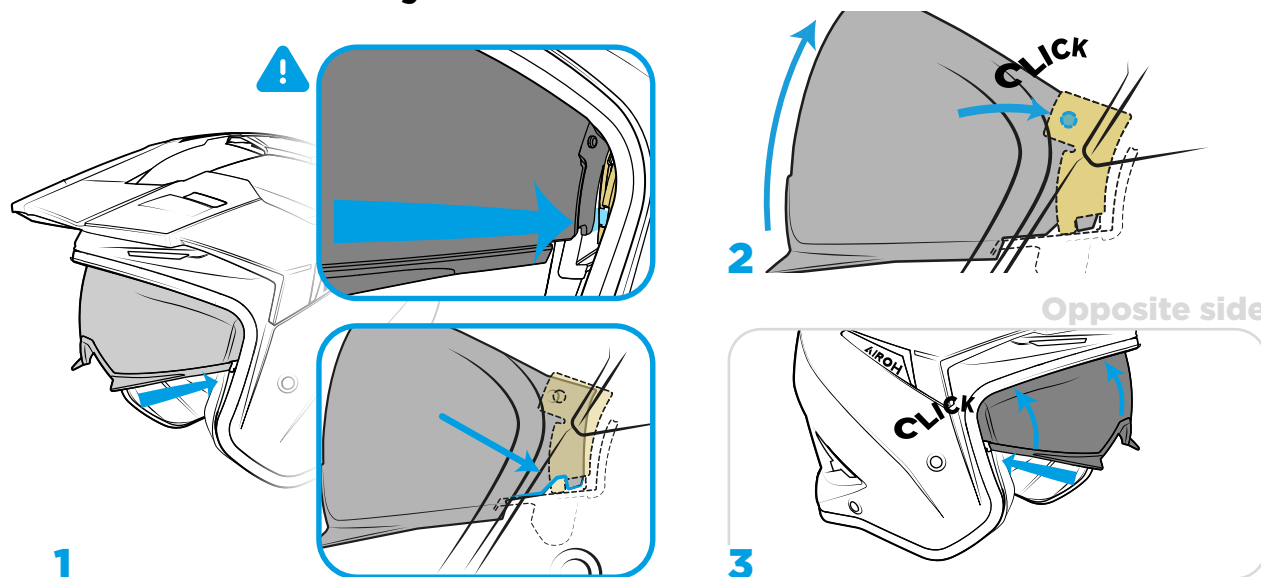 
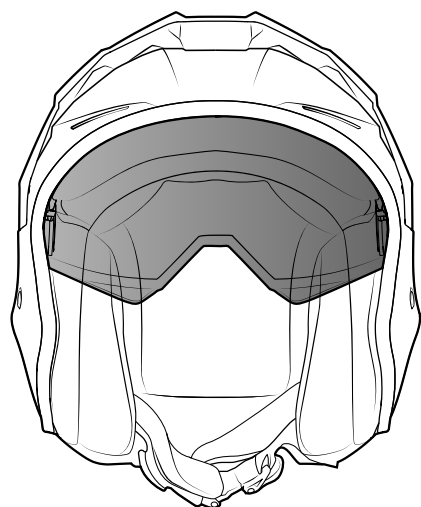 


CHIN STRAP

  
Unfastening the Chin Strap

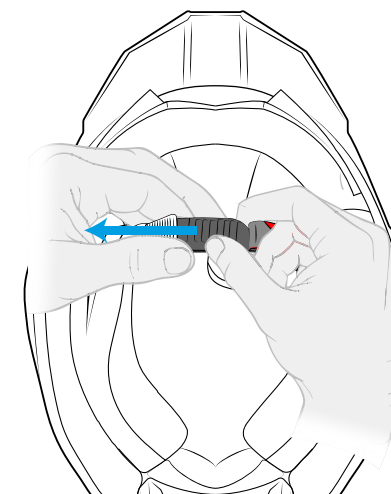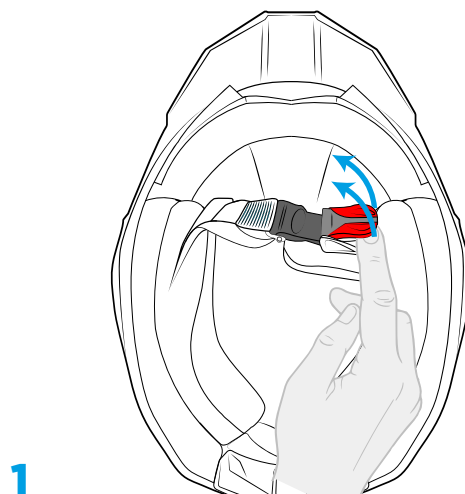

Fastening the Fit

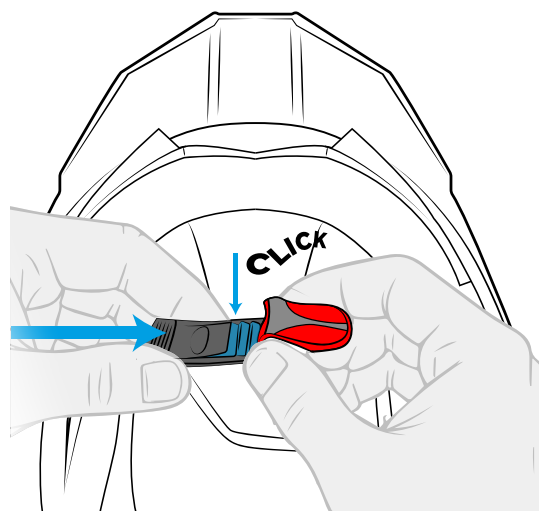 
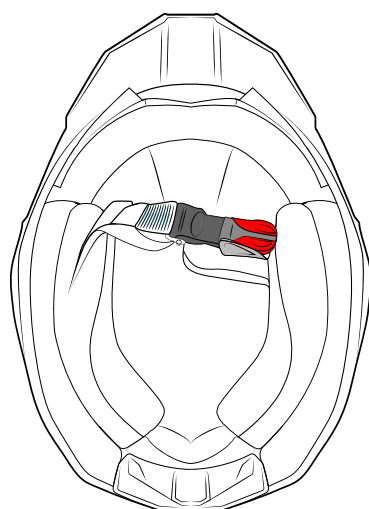 


Adjusting the Fit + Anti-Theft Ring

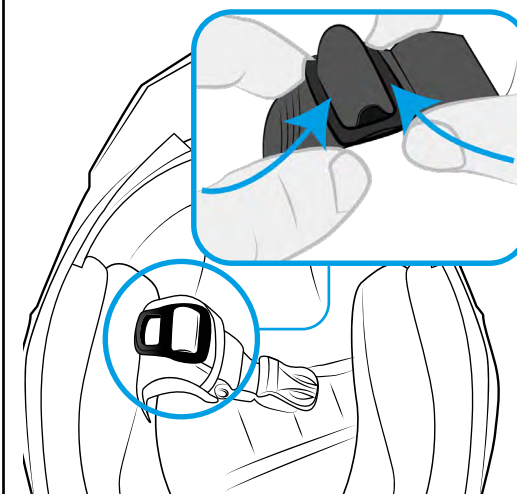 


COMFORT LINER REMOVAL

  
Cheek Pads

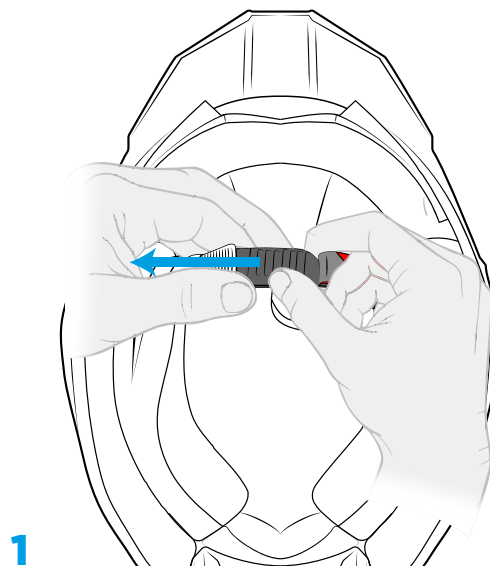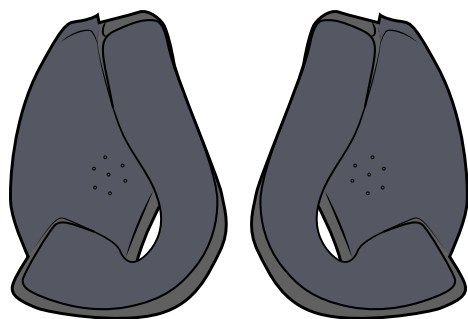


1

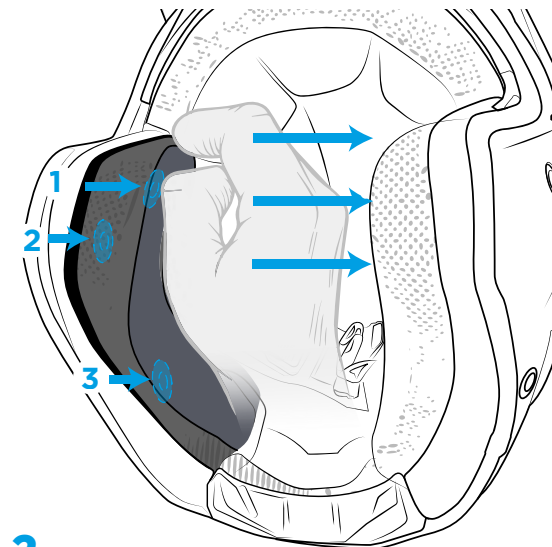 

2

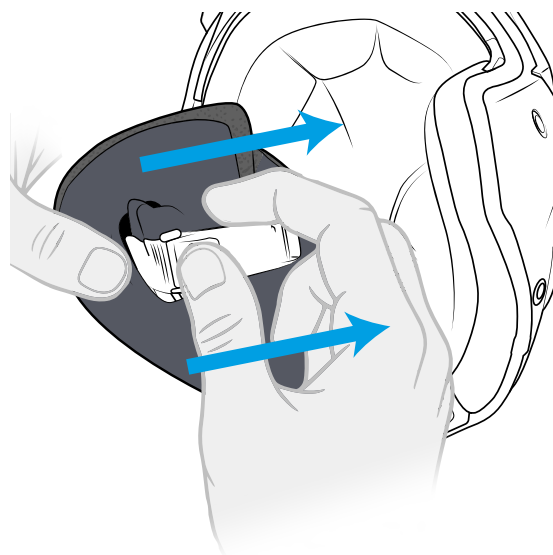 





3

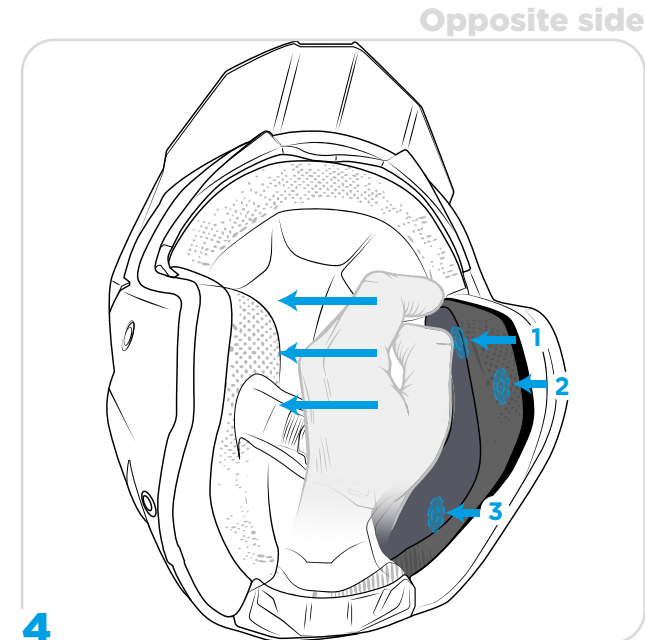 

4



COMFORT LINER REMOVAL

    Crown Padding

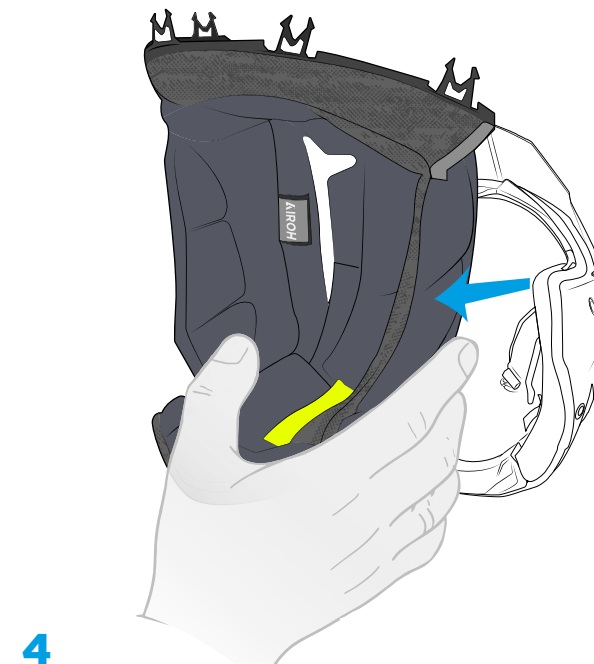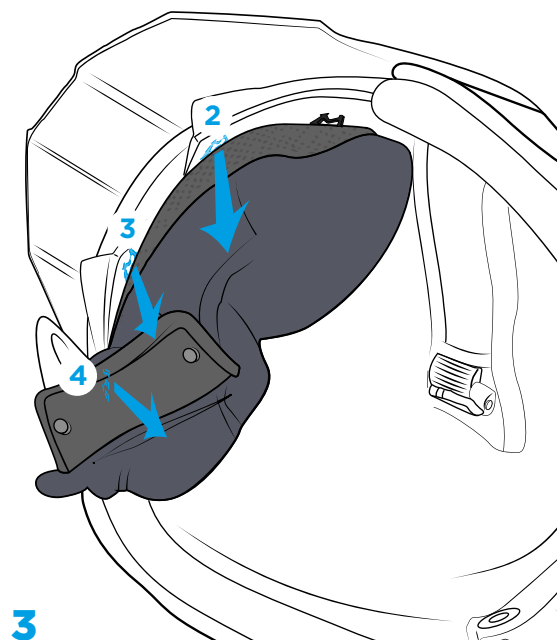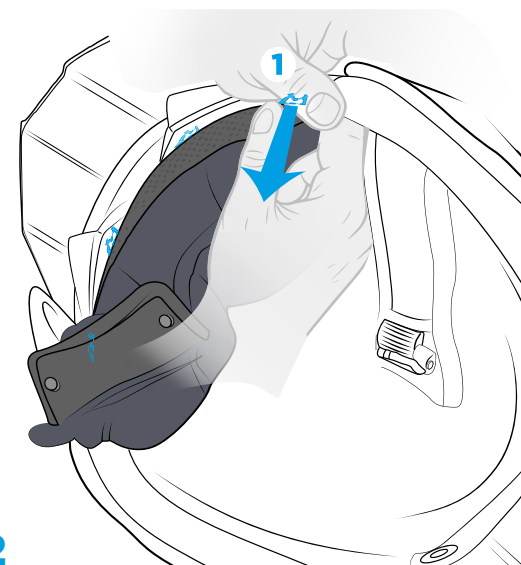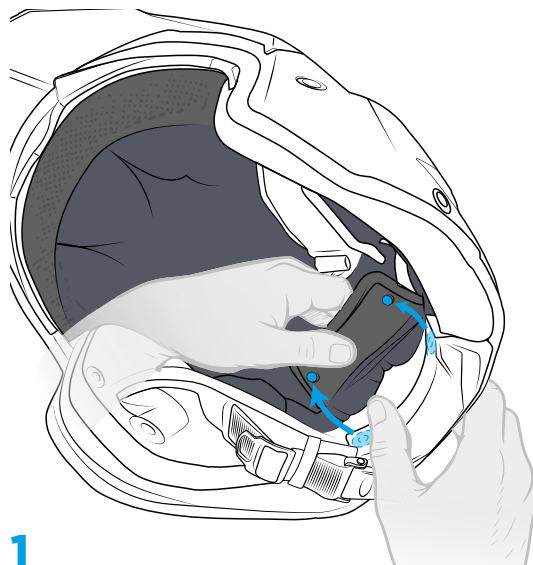


COMFORT LINER INSTALLING

  
Crown Padding

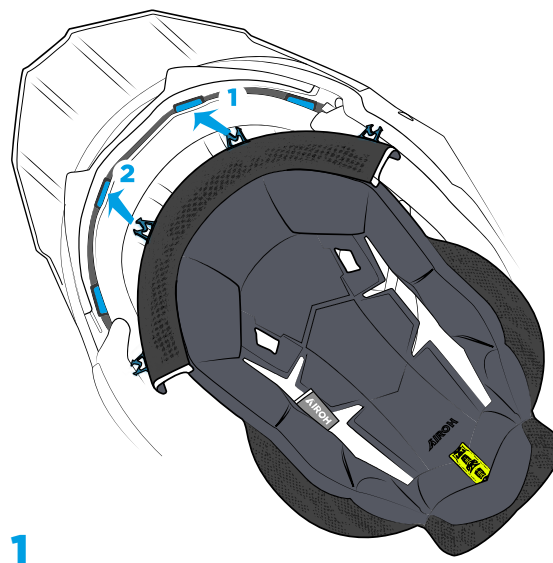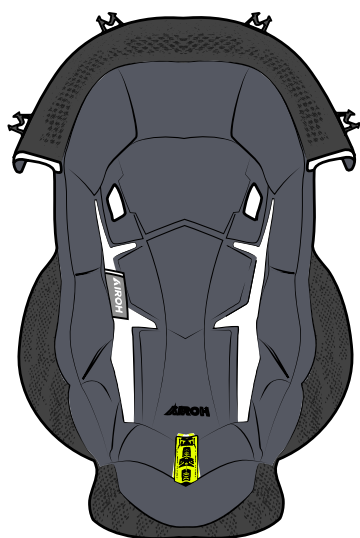

1

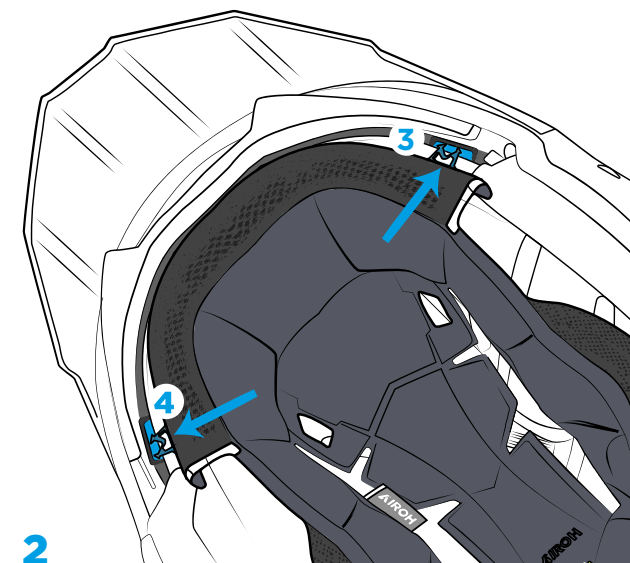 


2

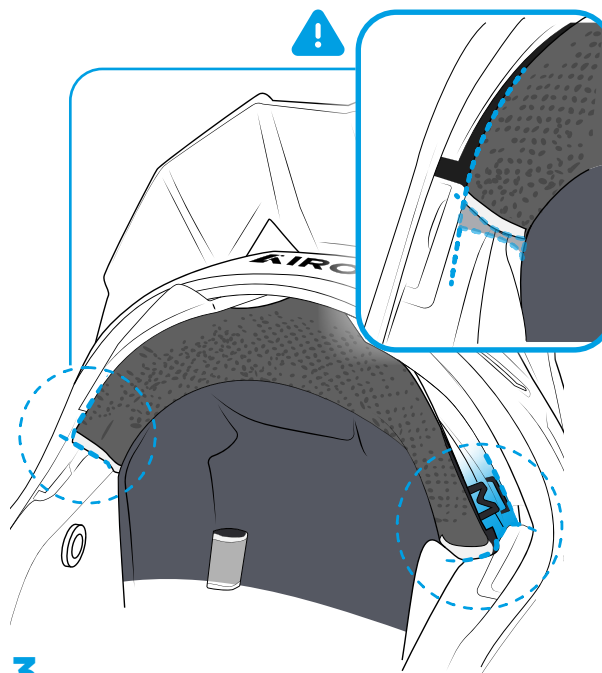 






3

 4

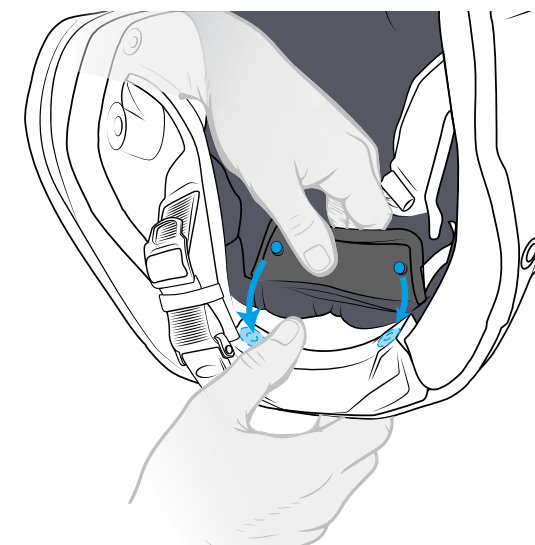


COMFORT LINER INSTALLING

     Cheek Pads

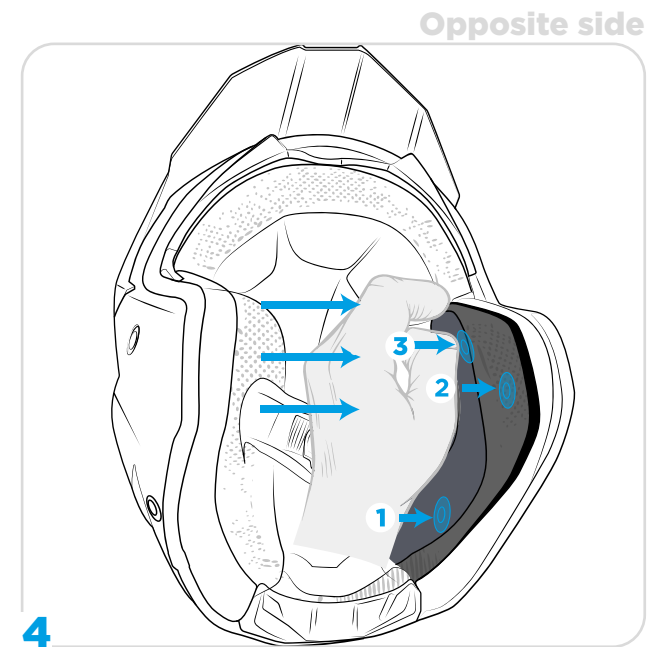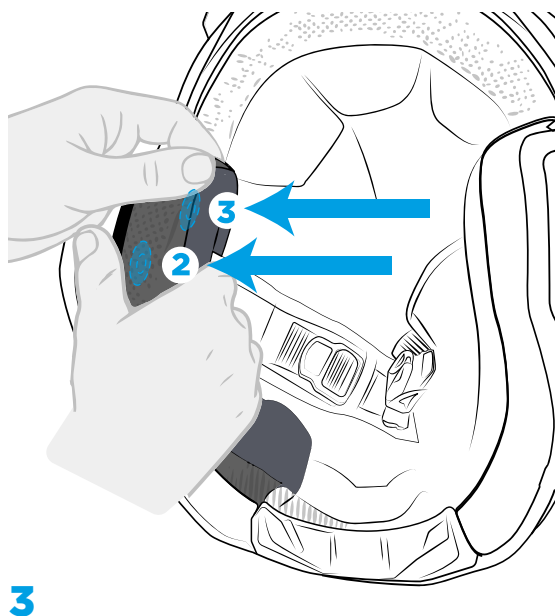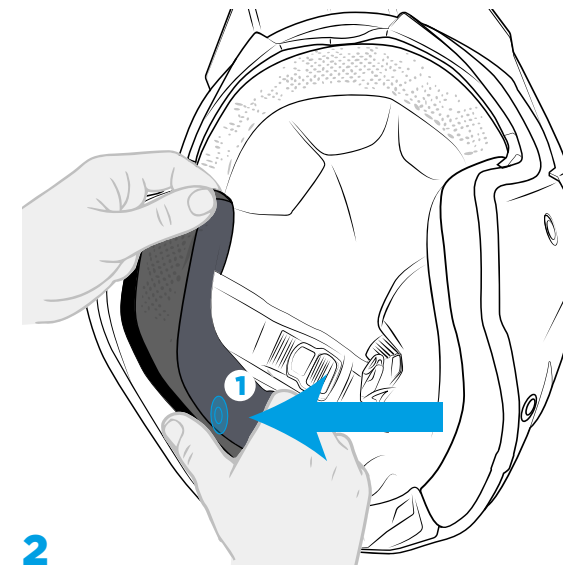
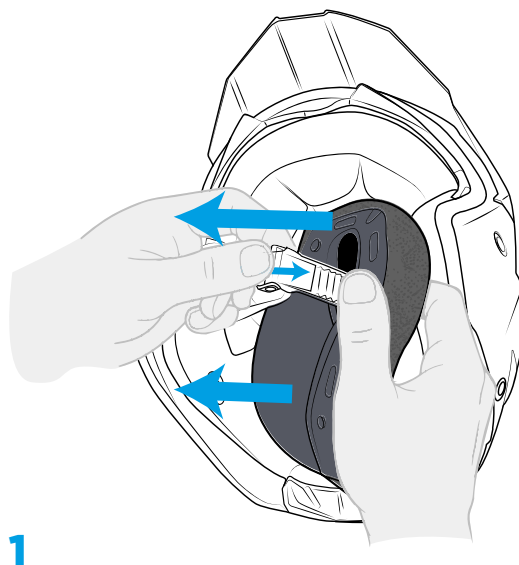
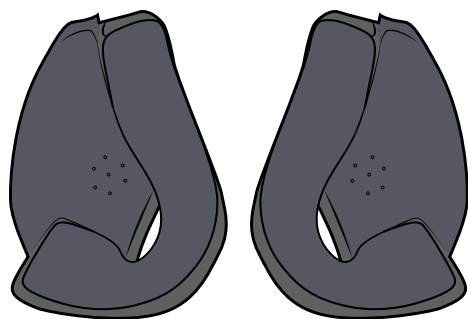


VENTILATION SYSTEM





 
Upper Vents Closed

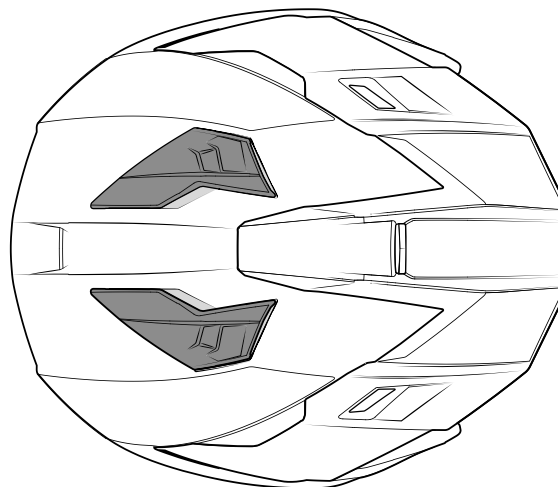







Open the Vents

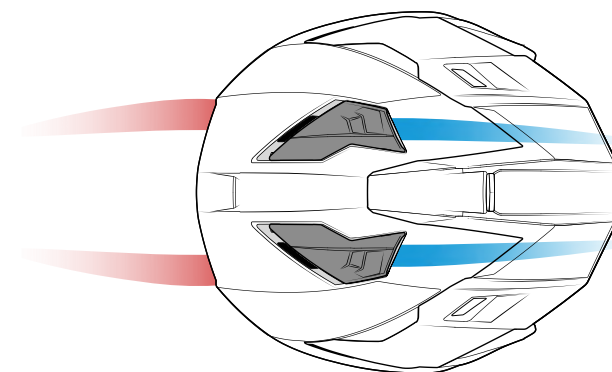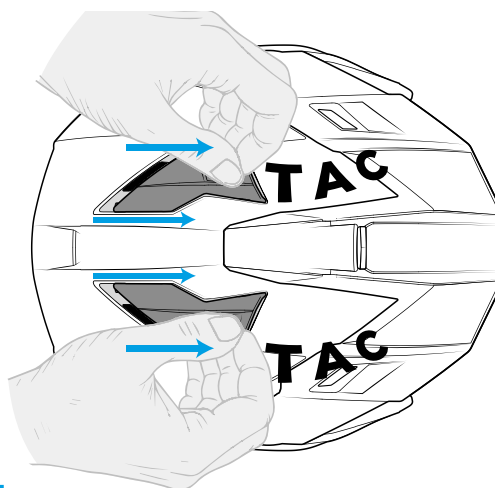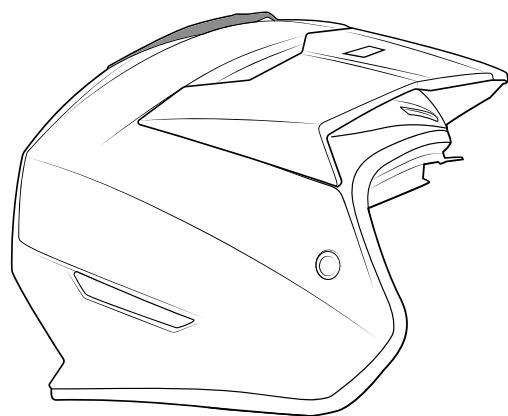   



VENTILATION SYSTEM

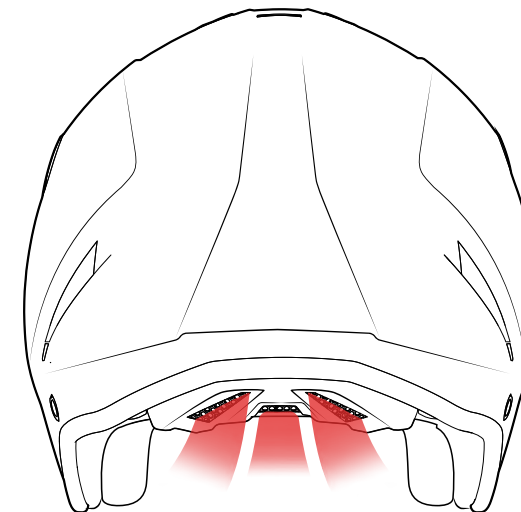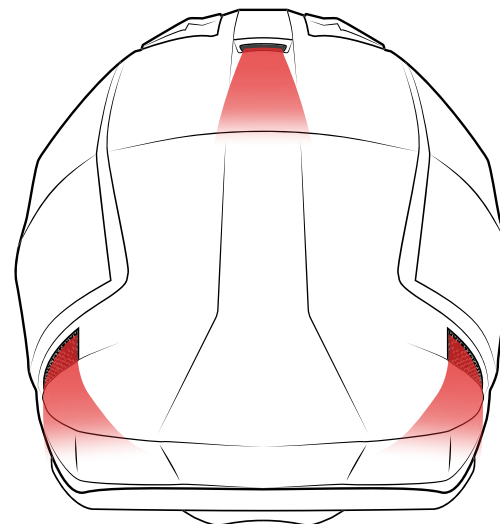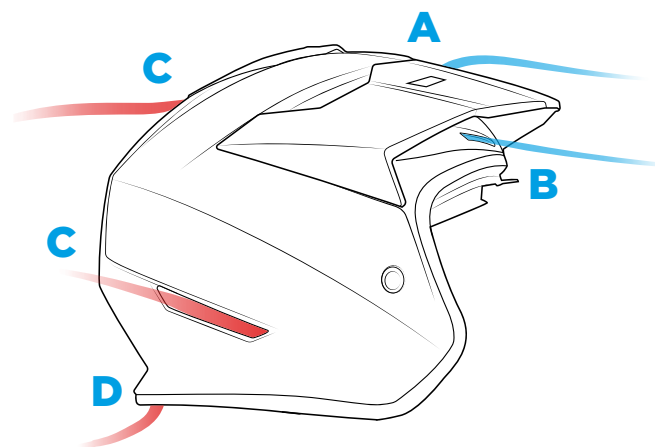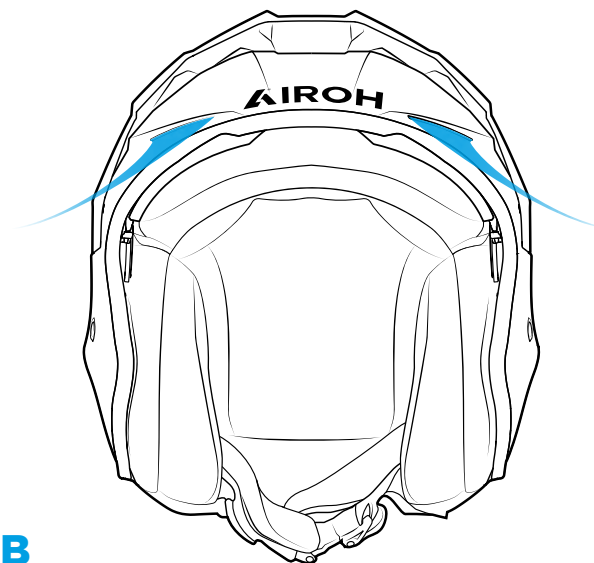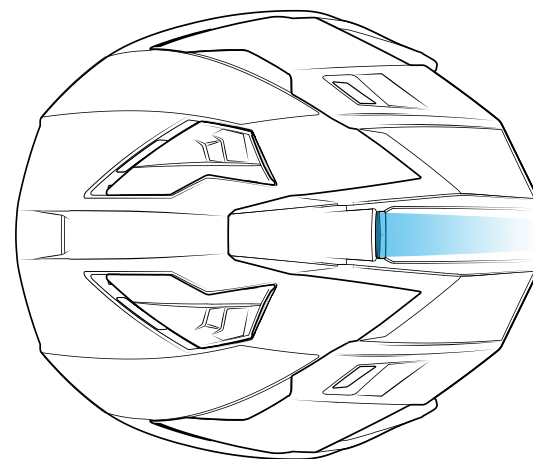     


PEAK REMOVAL

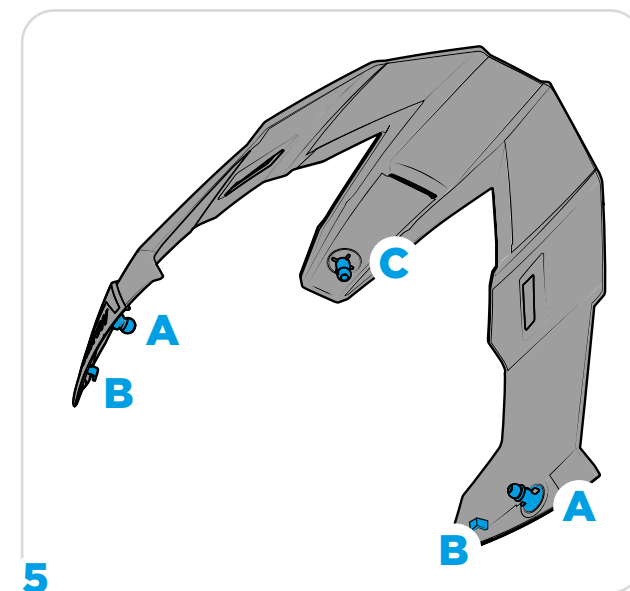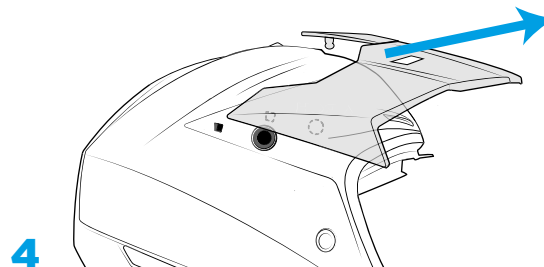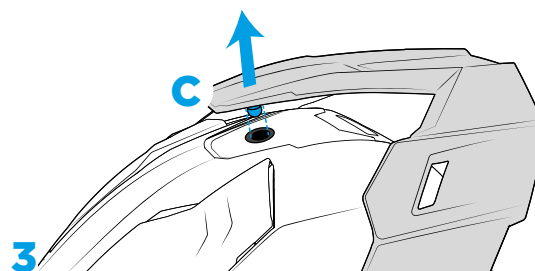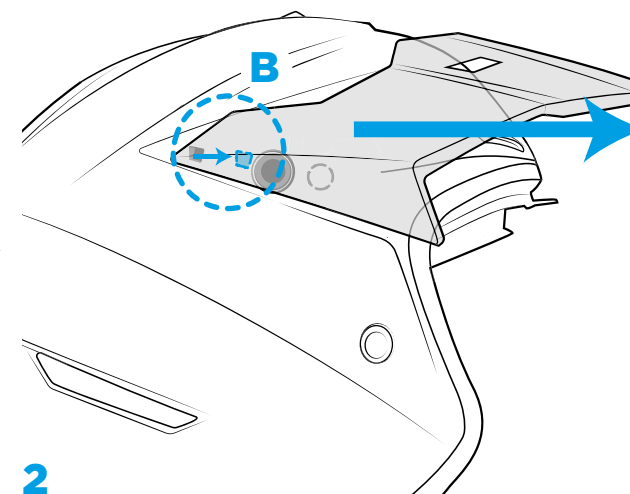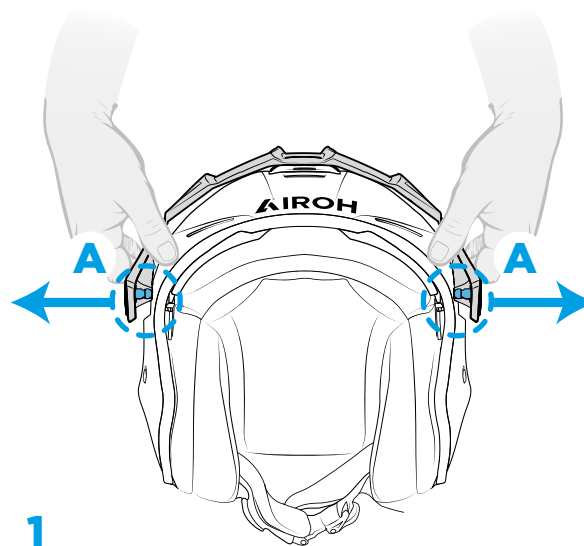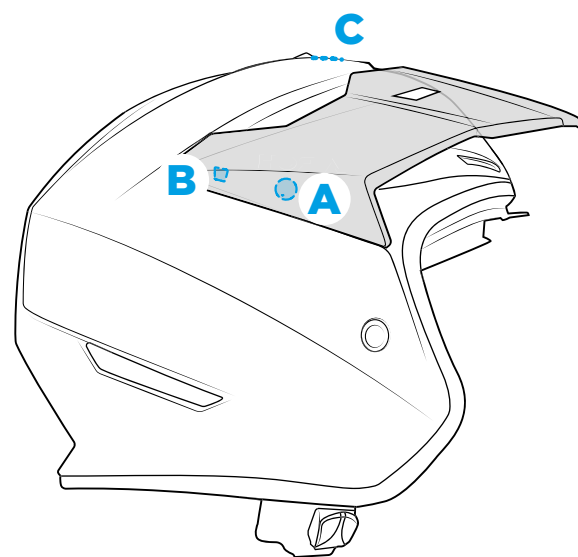      



PEAK INSTALLING

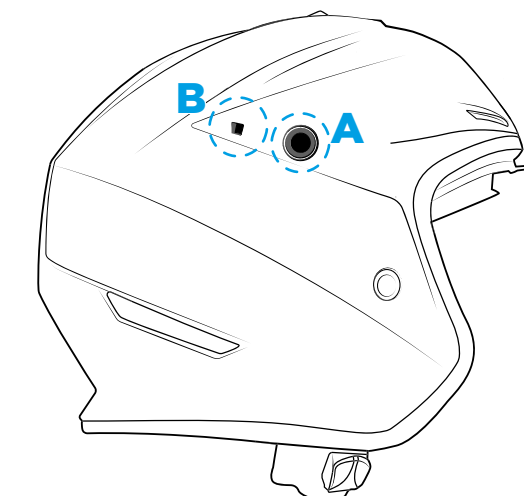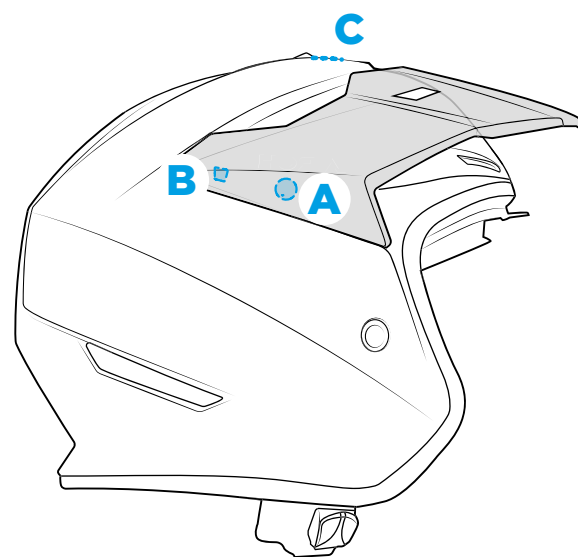  

1

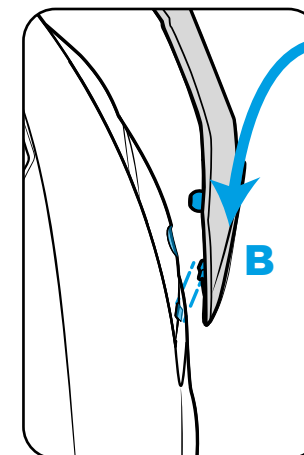 


2

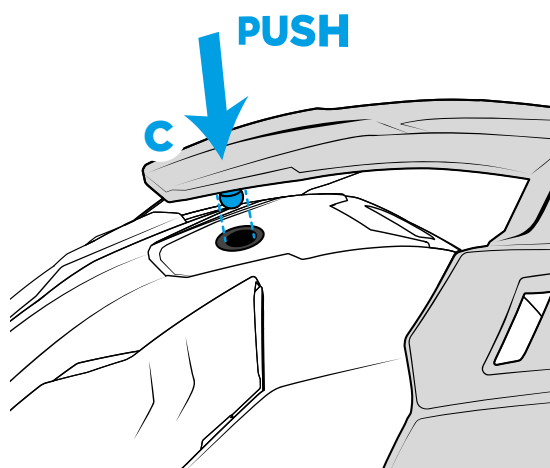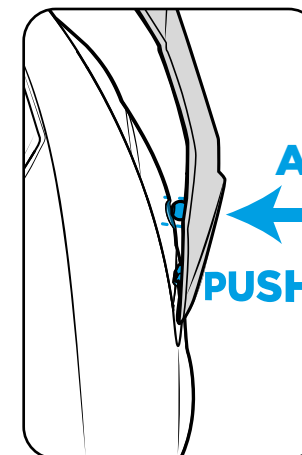  




3

 Opposite side

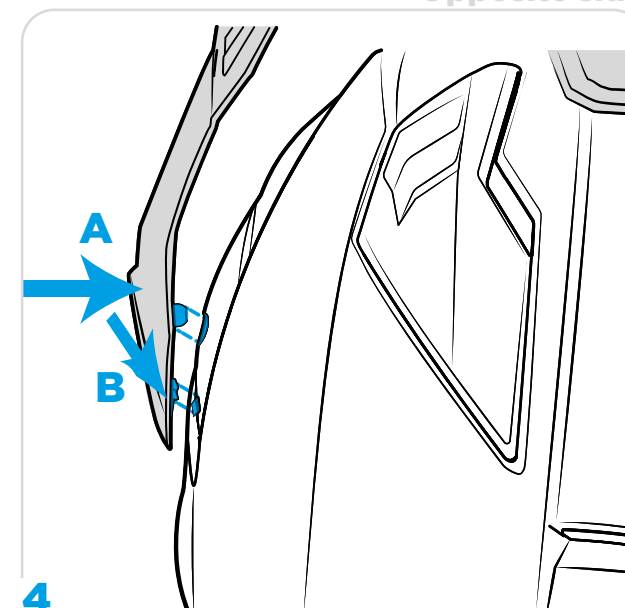


4

   
NAKED VERSION

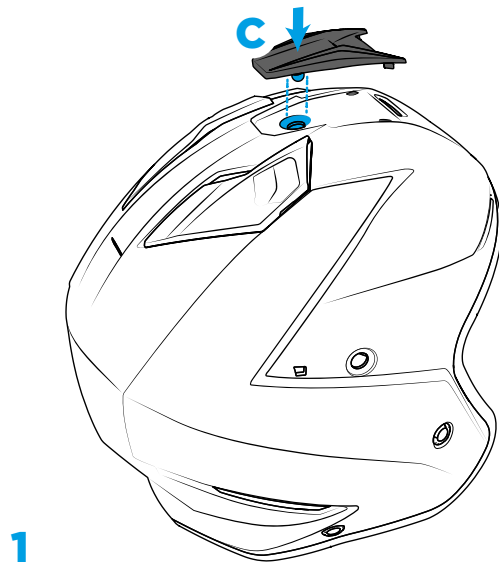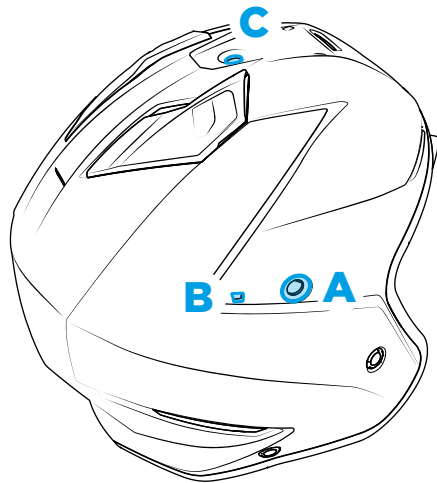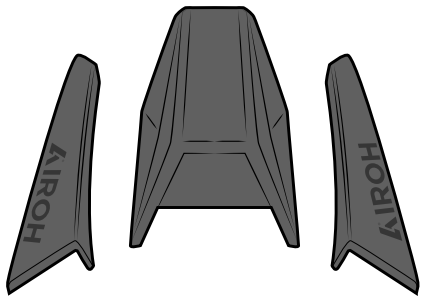


1

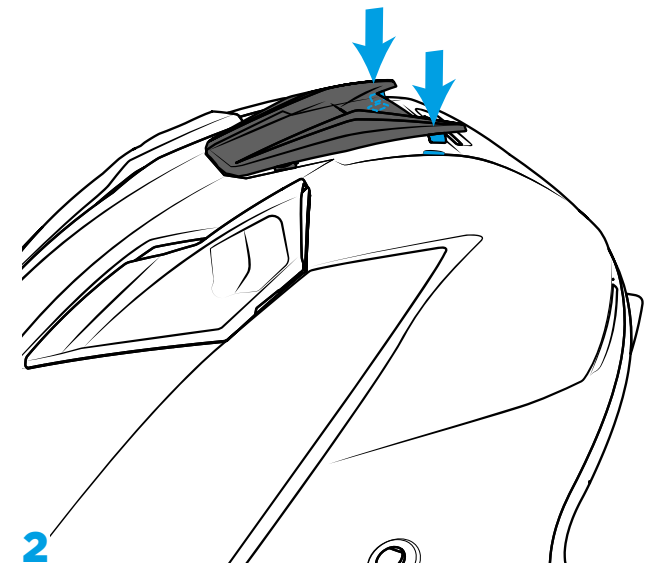 

2

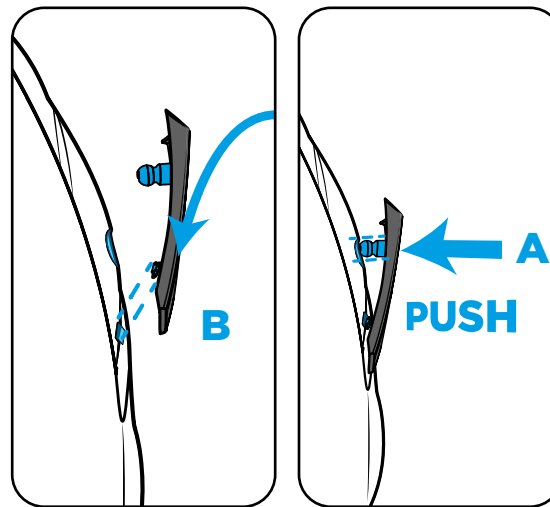 


3

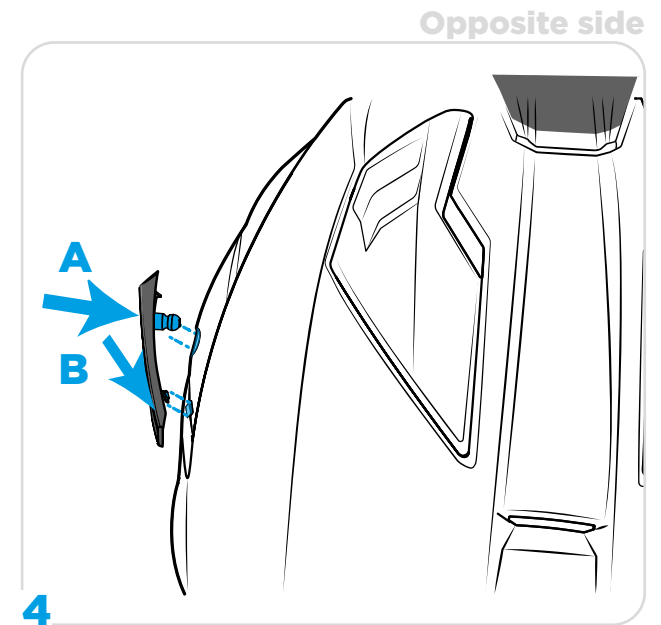 


4

 SPARE PARTS

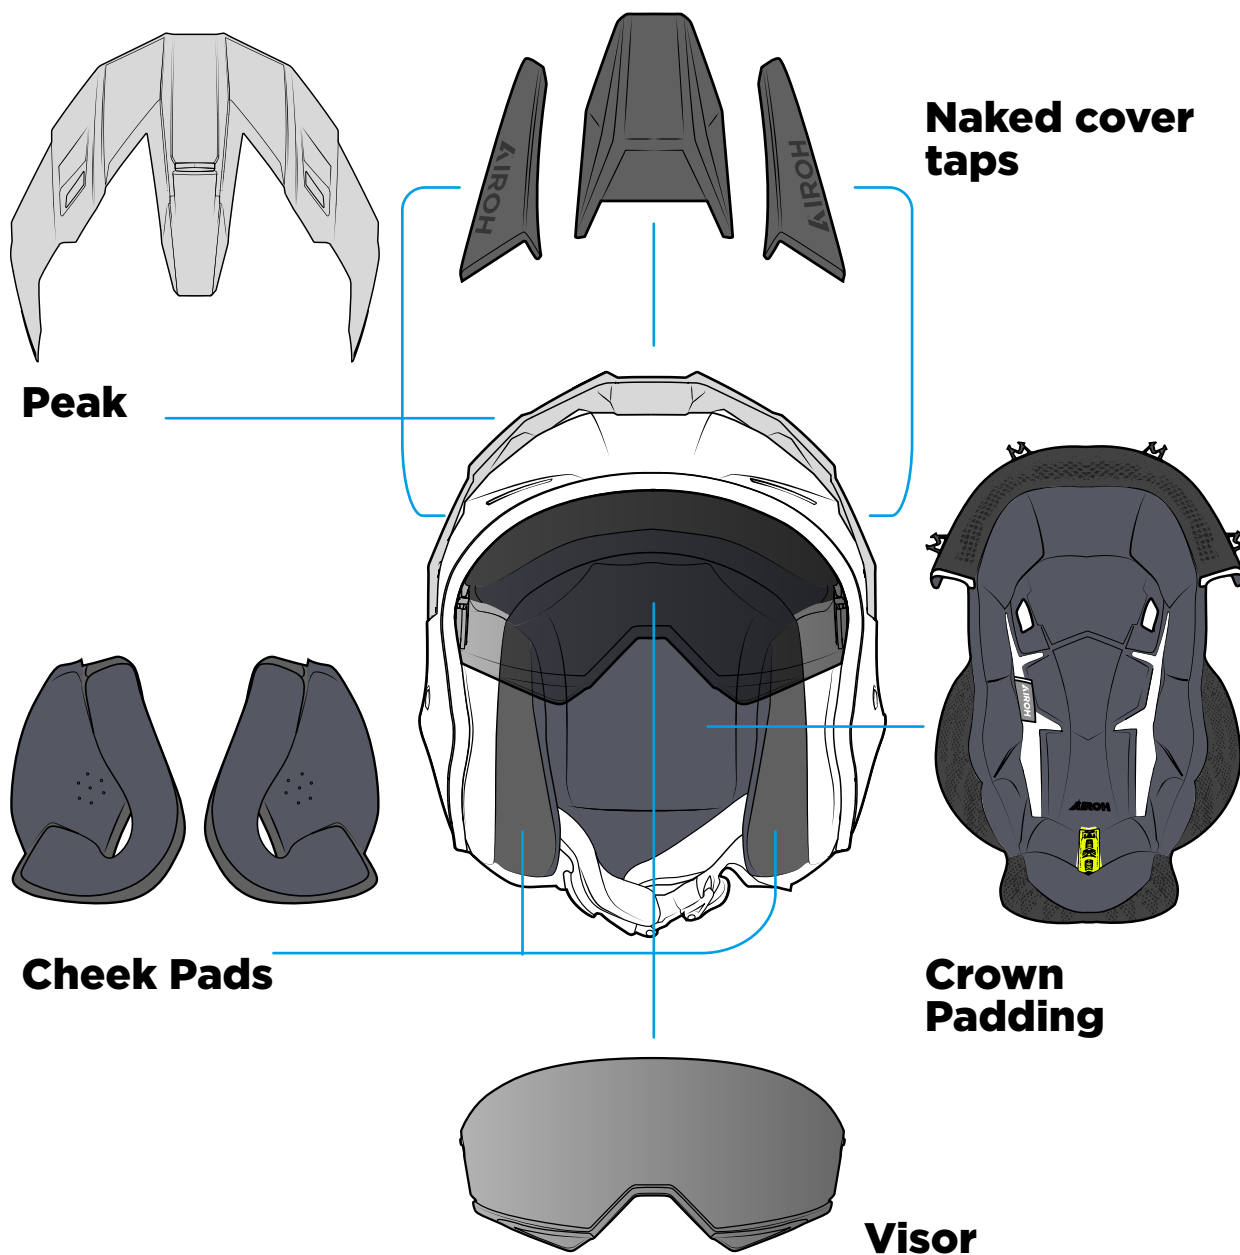

COMMUNICATION SYSTEM

 
Correct Lateral Positioning

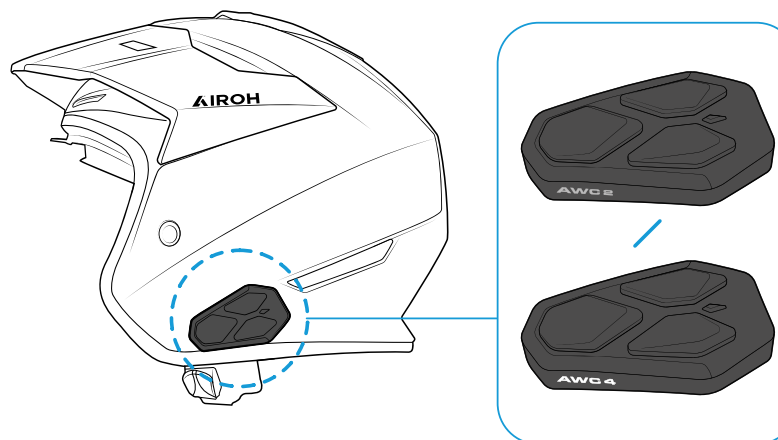


AWC 2



 AWC 4

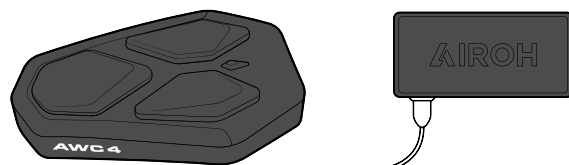

 Correct rear positioning of the battery only for **AWC 4**

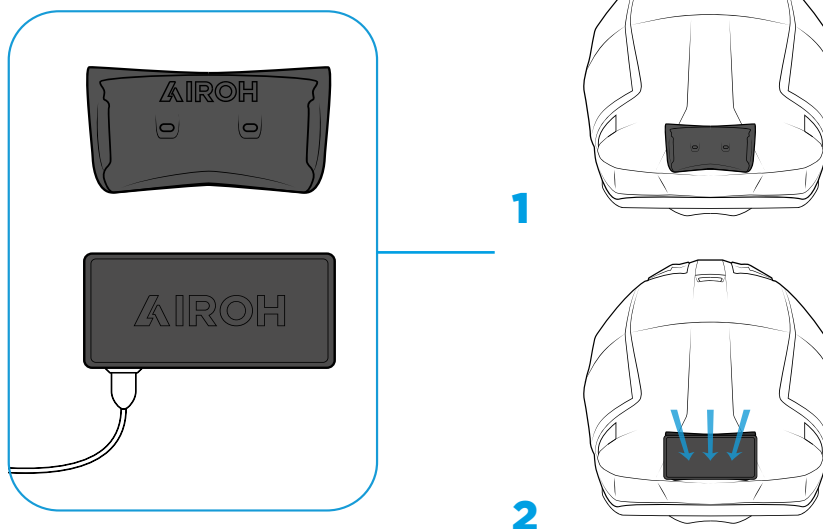


COMMUNICATION SYSTEM


AWC 2



 
AWC 4

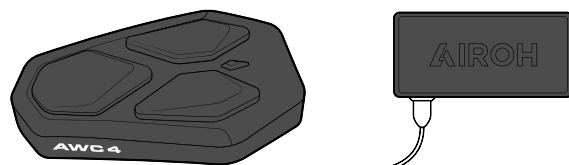

Internal Microphone Placement

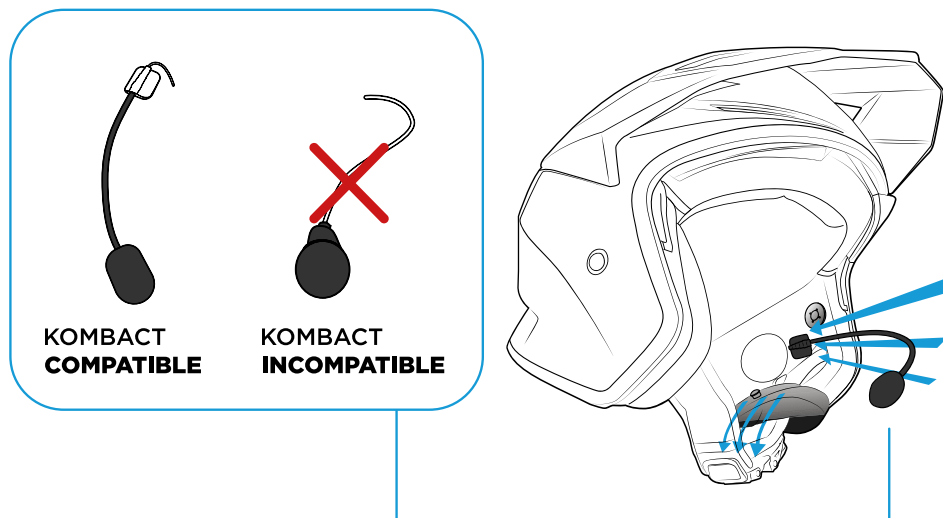 

Internal Speakers Placement

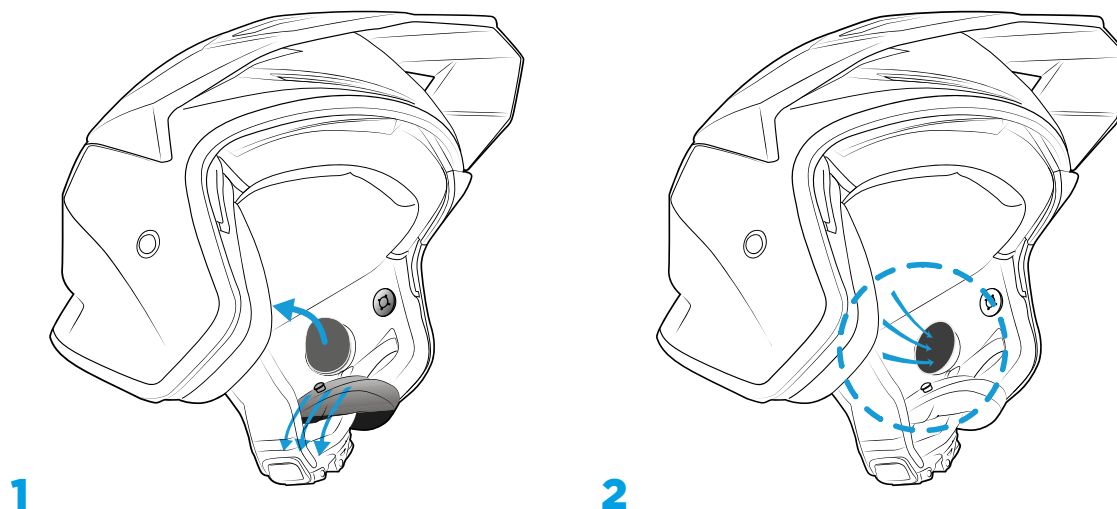 

A[®]IROH

LOCATELLI S.P.A

VIA DELLA RESISTENZA,
5/A, ALMENNO
SAN BARTOLOMEO 24030
BG - ITALY